



1:1 SCALE TEMPLATE FOR ATLAS (AT001)

ALWAYS check the Retrofitting Guide first. The space between the bottom of the endcap and the finished floor typically varies from no gap at all to 3"

