WOOD BASEBOARD COVER **GUIDE + INSTRUCTIONS**





IMPORTANT INSTRUCTIONS

GENERAL


This heater cover is designed to provide proper airflow around the finned tube element in residential and commercial hot water baseboard heater applications. A thermostat is not provided with this cover. Installation or use of this product in any manner not described herein will void the warranty and could result in injury, damage to property, or permanent damage to cover and/or heater.




1-844-567-5050 ventandcover.com




ASSEMBLY INSTRUCTIONS:

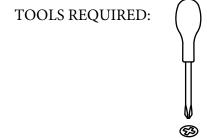


KIT INCLUDES*:

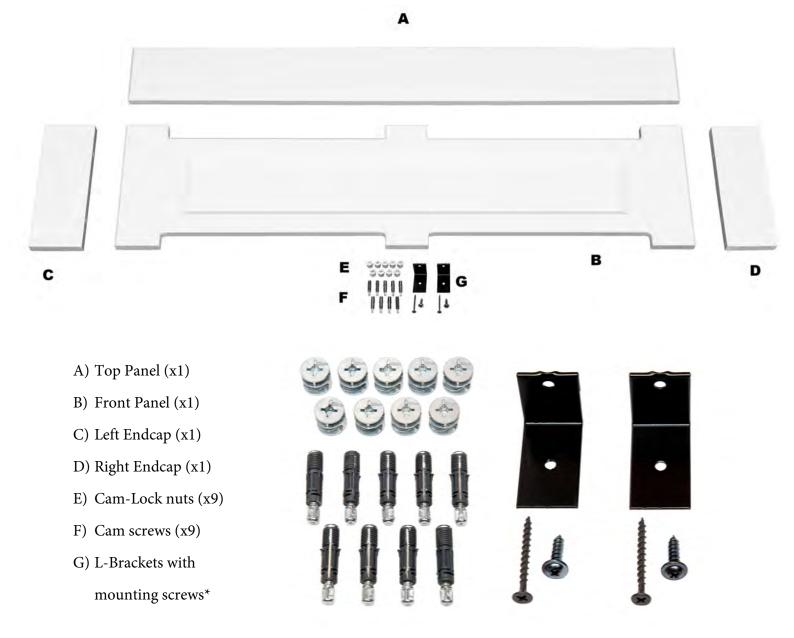


Check heater cover to make sure it has not been damaged in shipping and that all parts are included. Do not install if cover is damaged or missing parts.

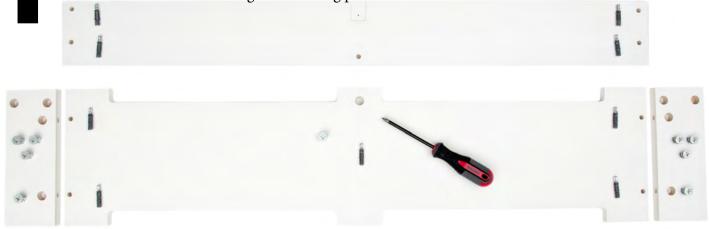


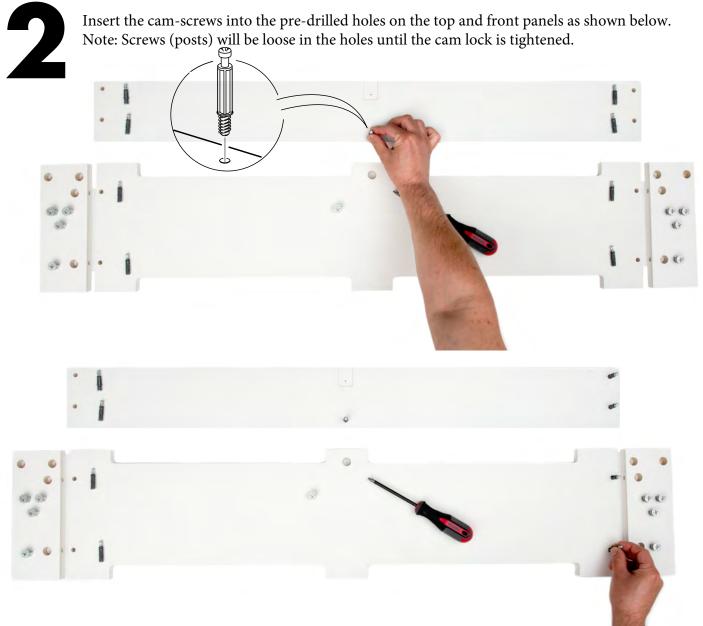




Insert the cam-lock nuts into the pre-drilled holes on the front panel and end caps ensuring that the arrow on the cam-lock is pointing toward the hole in which the cam screws will be inserted.

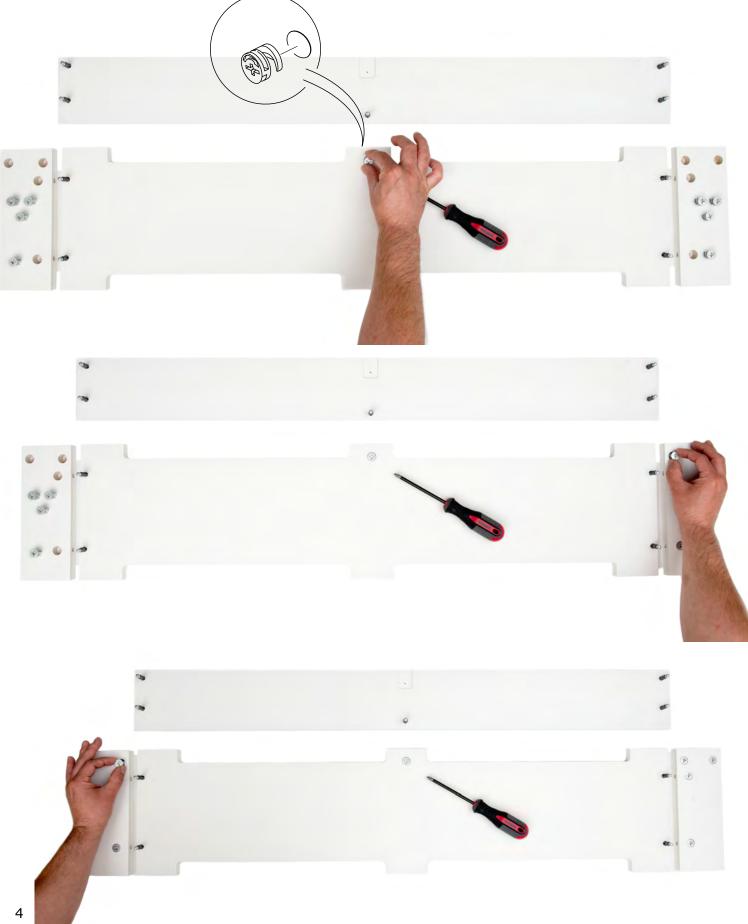

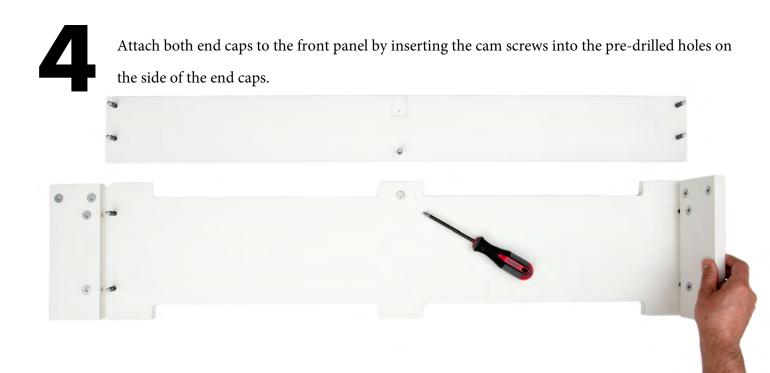


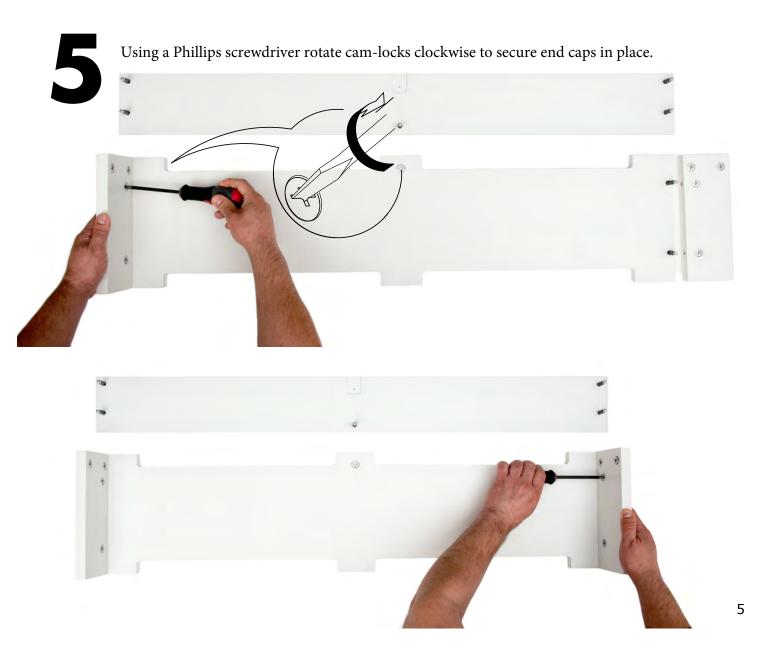


Attach top panel by inserting the cam screws into the pre-drilled holes on the front panel and top of the end caps.



Using a Phillips screwdriver rotate cam-locks clockwise to secure top panel in place.

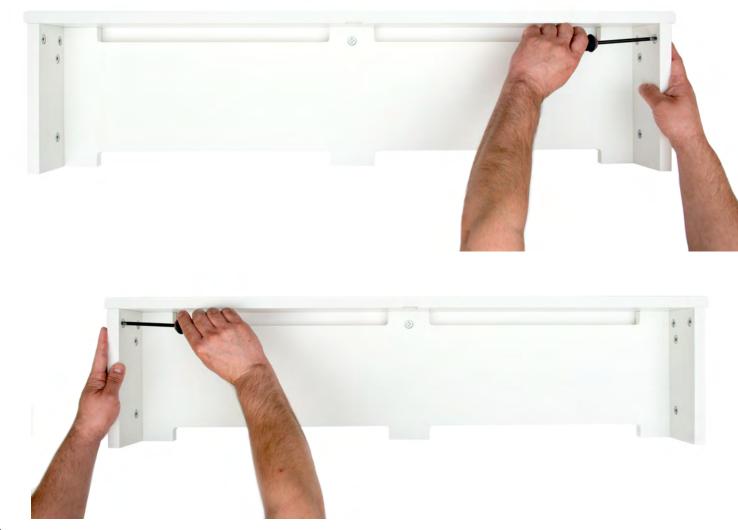


WALL BRACKET INSTALLATION (OPTIONAL):

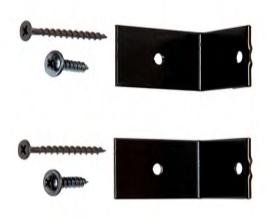

Our wood baseboard cover top panel comes pre-drilled with holes for mounting with wall brackets. (The number of wall brackets included depends on the length of the panel ordered.)

 To install the baseboard covers using the optional wall brackets attach the L-brackets to the top panel through each of the mounting holes on the downward facing portion of the panel with the small wood screws, then attach the Lbrackets to the wall with a large wood screws using a screwdriver.





ventandcover.com

1-844-567-5050